

TB 127

## TECHNICAL BULLETIN

### SAFETY ISSUE

---

**For the Attention of :** Service Engineers, Installers, Trade Customers, Testers,  
Training Dept, H & S Manager

**Date :** 16<sup>th</sup> April 2012

**Product :** Midi SL

**Subject :** Pit Prop Instructions for Short Travel

**Pages :** 4

---

**Originator :** Stannah Lifts Ltd, Anton Mill, Andover, Hants SP10 2NX 01264 339090

---

### Detail

Instructions for installers to fit signage/remove pit prop (where appropriate) for short travel lifts. Additional guidance given for service engineers to allow safe access to the pit area.

### Summary

For lifts with a measured travel (door threshold to door threshold) of 610mm or below the following rules are to be followed:



If lift travel is between 515mm and 610mm fit this label:

To activate pit prop safely  
remove carriage panel.  
Whilst stood on platform  
use pit prop rod or screw  
driver to engage prop

If lift travel is below 515mm remove pit prop/catch and fit this label:


Do not enter pit.  
To gain safe access  
remove floor plates  
and work from above

Please see page 2 for fitment of labels. See pages 3 & 4 for pit prop activation and safe access process.

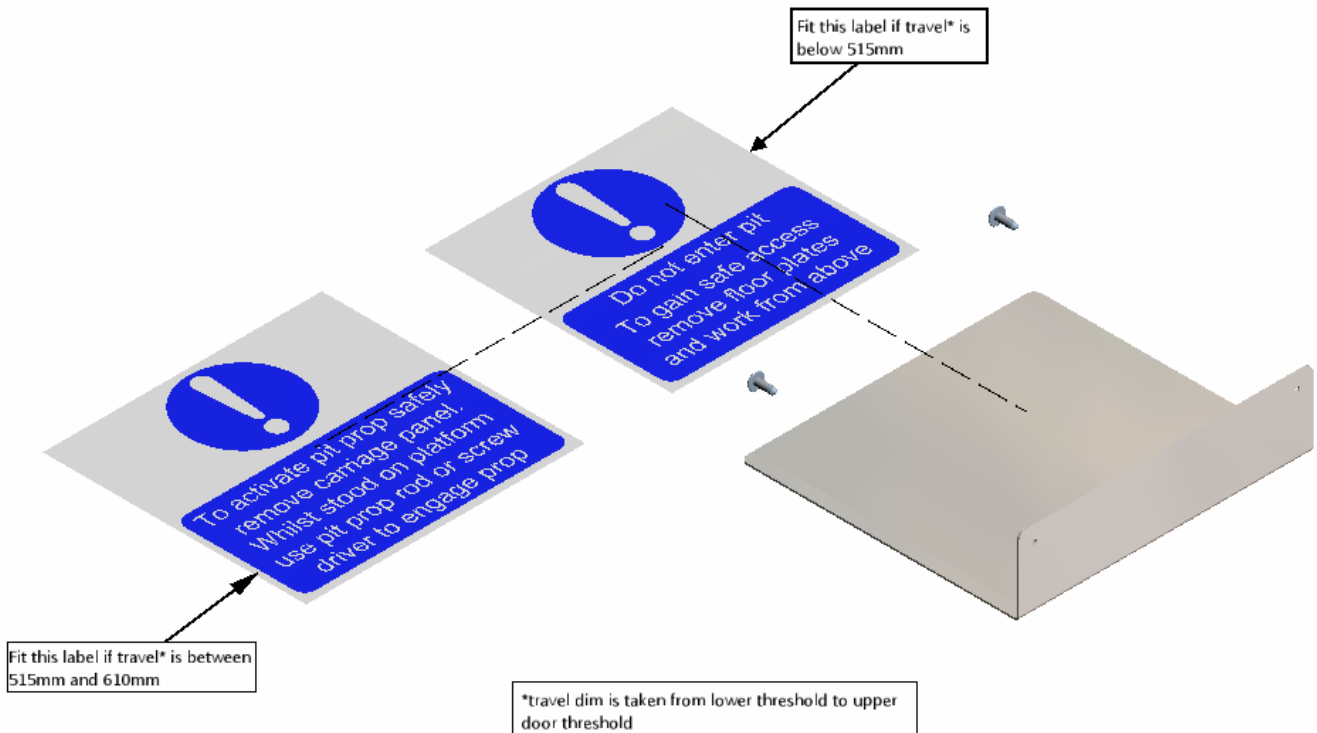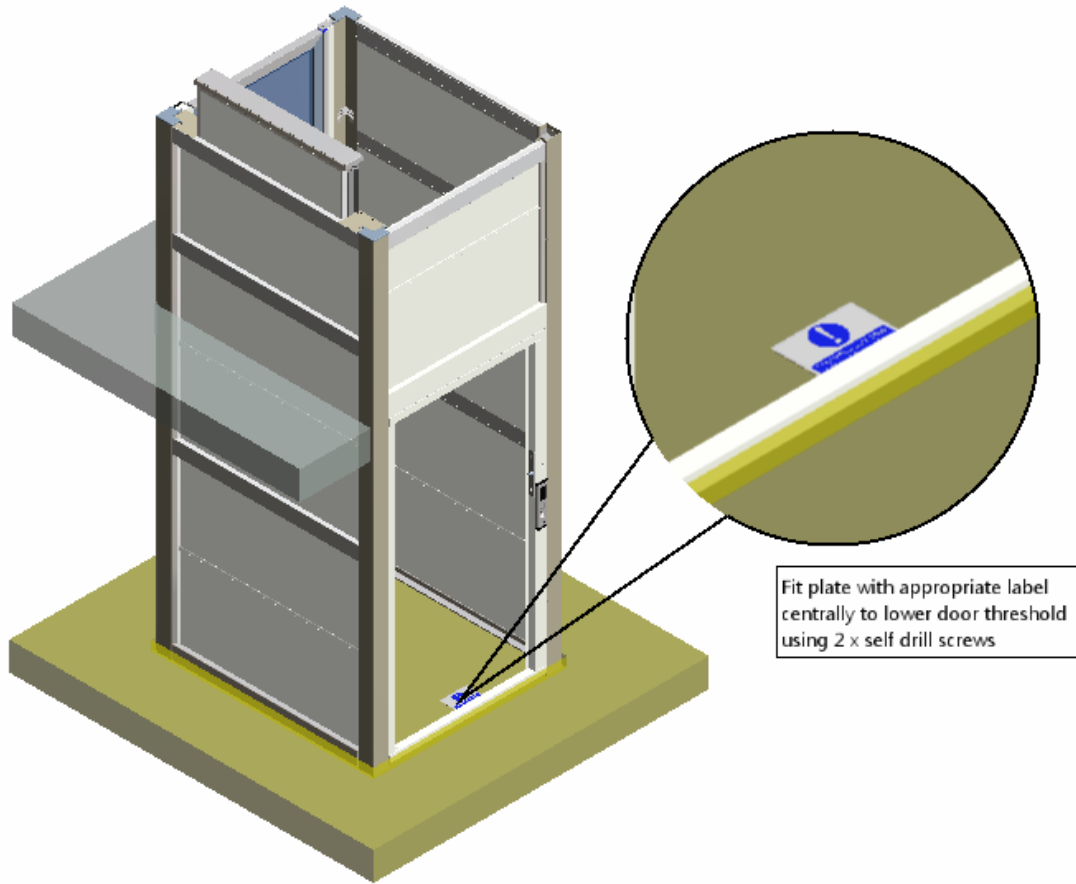

## Service Engineers

For lifts with a travel between 515mm and 610mm

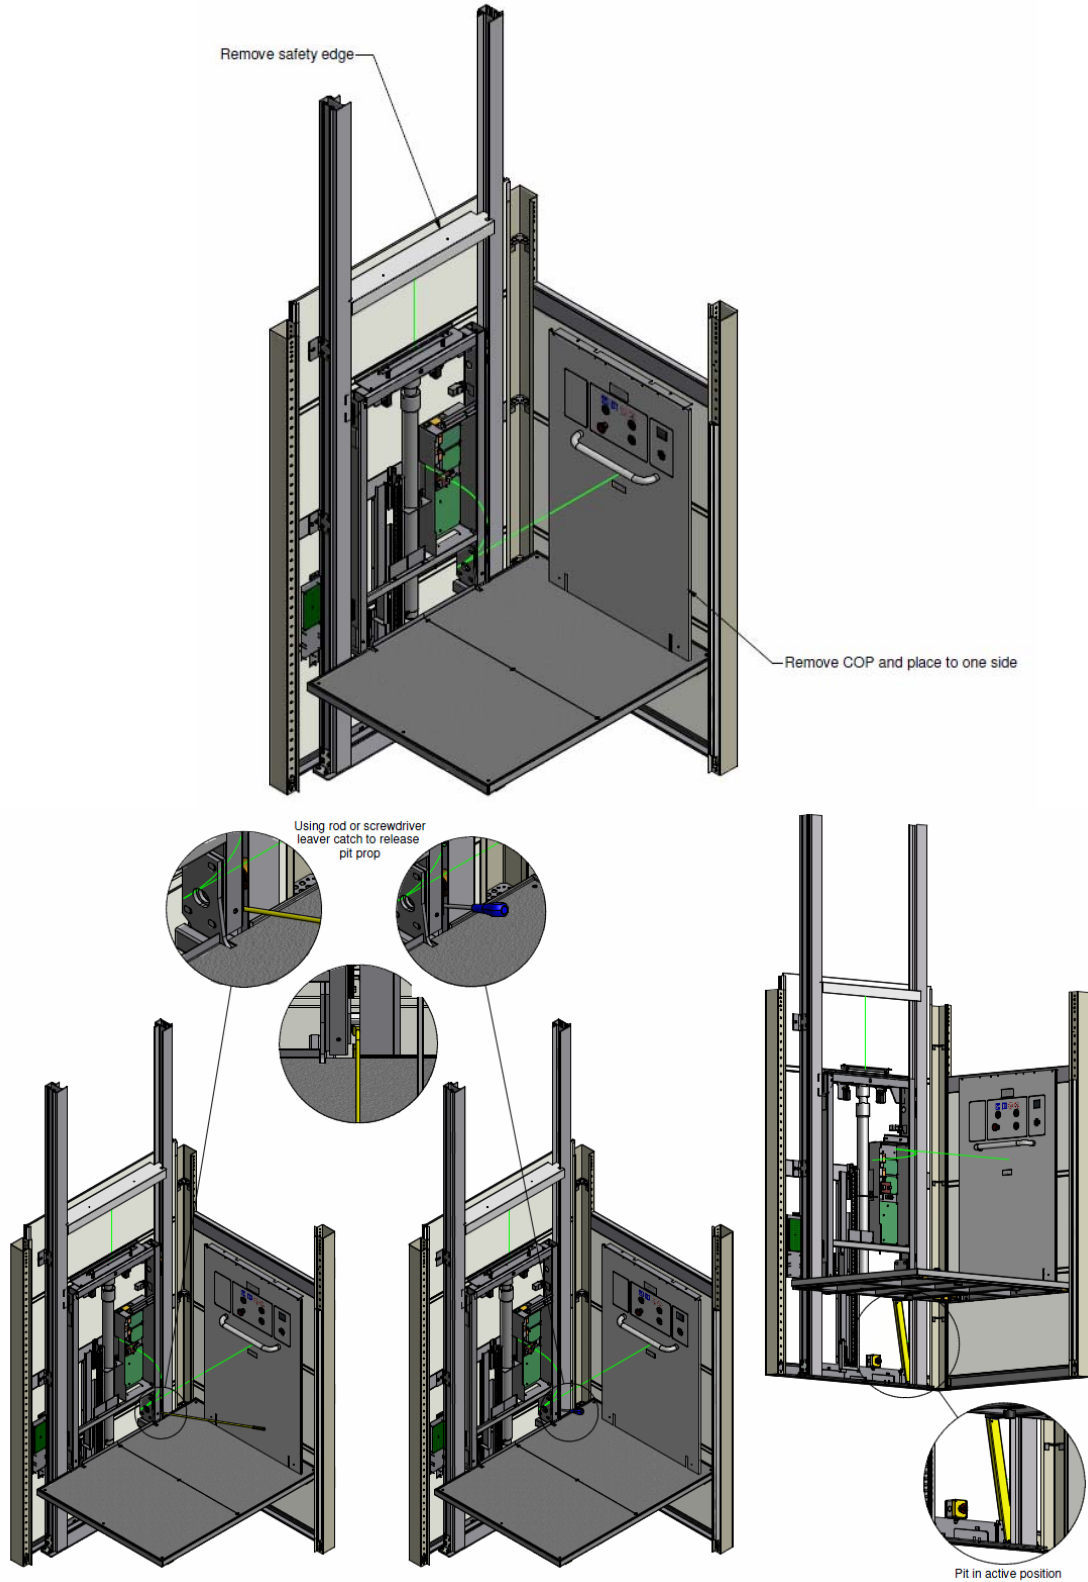

For lifts with a travel below 515mm

